

# Quick Check List

## Quick Check Preventative Maintenance Procedures for Kalmar Terminal Tractors

	Interval Hours										
	Daily	50	200	250	500	750	1000	1250	1500	1750	2000
Check All Fluid Levels	X										
Change Engine Oil**					X		X		X		X
Change Engine Oil Filter **					X		X		X		X
Change Transmission Oil** (Dextron-500 hrs., Synthetic Oil- 3000 hrs.)					X		X		X		X
Change Transmission Filter** (external)			Main Filter only				X				X
Change Transmission Filter (internal)**	At Overhaul										
Change Hydraulic Oil	Annually										
Change Hydraulic Filter (external)					X		X		X		X
Change Fuel Filter(s)*					X		X		X		X
Change Air Cleaner*	As Needed										
Change Coolant											X
Change Differential Oil SISU (300 hrs. initial) Arvin Meritor, Dana Spicer	Annually								X X		
Lubricate Chassis				X	X	X	X	X	X	X	X
Lubricate 5 <sup>th</sup> Wheel Boom & Cylinders				X	X	X	X	X	X	X	X
Lubricate Latches & Hinges				X	X	X	X	X	X	X	X
Repack Front Wheel Bearings (If applicable)							X				X
Inspect/Clean Battery & Terminal Ends		X		X	X	X	X	X	X	X	X
Inspect All Belts & Pulleys	X	X		X	X	X	X	X	X	X	X
Inspect Radiator & Hoses	X	X		X	X	X	X	X	X	X	X

# Quick Check List

## Quick Check Preventative Maintenance Procedures for Kalmar Terminal Tractors

	Interval Hours											
	Daily	50	200	250	500	750	1000	1250	1500	1750	2000	
Inspect All Controls	X	X		X	X	X	X	X	X	X	X	X
Inspect All Lights	X	X		X	X	X	X	X	X	X	X	X
Inspect & Adjust Brakes if manual				X	X	X	X	X	X	X	X	X
Inspect Steering Components***				X	X	X	X	X	X			
Inspect Pneumatic Systems				X	X	X	X	X	X			
Drain Air Tanks	X	X		X	X	X	X	X	X	X	X	X
Inspect Hydraulic System	X	X		X	X	X	X	X	X	X	X	X
Inspect Fifth Wheel & Boom	X	X		X	X	X	X	X	X	X	X	X
Inspect Fifth Wheel Jaws	X	X		X	X	X	X	X	X	X	X	X
Inspect Tires	X	X		X	X	X	X	X	X	X	X	X
Check Engine RPM's		X		X	X	X	X	X	X	X	X	X
Retorque Front and Rear Suspension Bolts							X		X			X
Retorque Powertrain Mounting Bolts							X					X

\* See Operators/Maintenance Manual For Further Information

\*\* See Component Manufacturer's Recommended Intervals

\*\*\* Lubricate Steering and Suspension Components Approximately Every 250 Hours

**REFER TO SERVICE MANUAL FOR ADDITIONAL DETAILS**

